



Existing Ceiling J-box


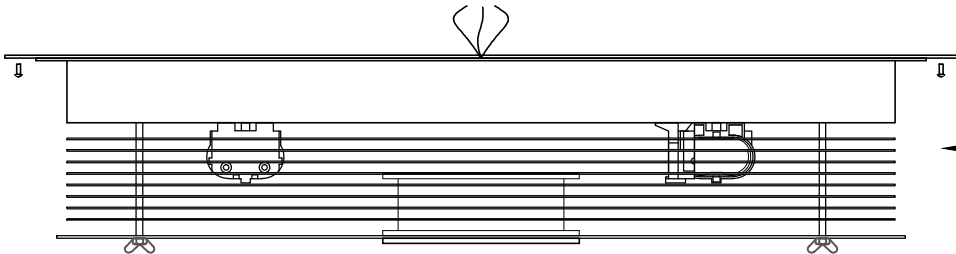


1.) Raise fixture up to j-box, make-up wiring connections as per the NEC & local code (black=power, white=neutral, green=ground) (120V/2.6A) Using appropriate anchors by others, securely mount fixture to ceiling.

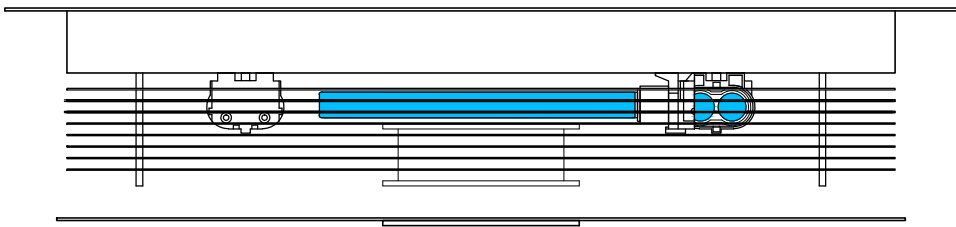

2.) With power disconnected, install lamps. Remove the wing nuts on the bottom cover, remove cover to access the lamp sockets. (see below) After lamps are installed re-install bottom cover.

Dust filter is located inside the black grill on the cover. Snap off the plastic grill, remove filter, gently wash with soap and water, re-install filter & grill.

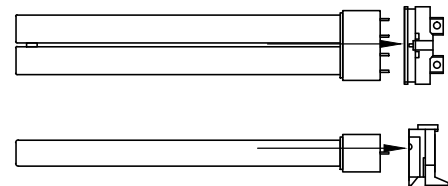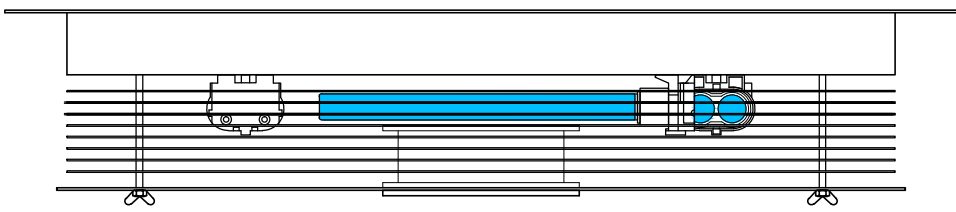

Carefully align lamp base inside lamp holder between the metal tabs inside the holder and aligning with pins on lamp base & the slots in the holder. Push lamp in until it snaps in place.

Fixture can now be powered & tested AFTER taking UV protective measures.
UV protective measures

WARNING: Temporary eye damage may result from DIRECTLY viewing the light produced by these lamps. To reduce the risk of exposure to UV-radiation, take UV-radiation protective measures for personnel during servicing. WEAR EYE & SKIN PROTECTION.

2X2-435

INSTALLATION INSTRUCTIONS

Electrical Requirement: 120V/2.6A (grounded)
Lamps: 70 nominal watts; 44 UVW



1931 Thomas Rd.
901-800-1709

Memphis, TN 38134
email@evergreenUV.com

EPA ESTABLISHMENT NO. 91347-TN-001

